




WESTERN MOTORSPORTS

Ford Performance since 1989

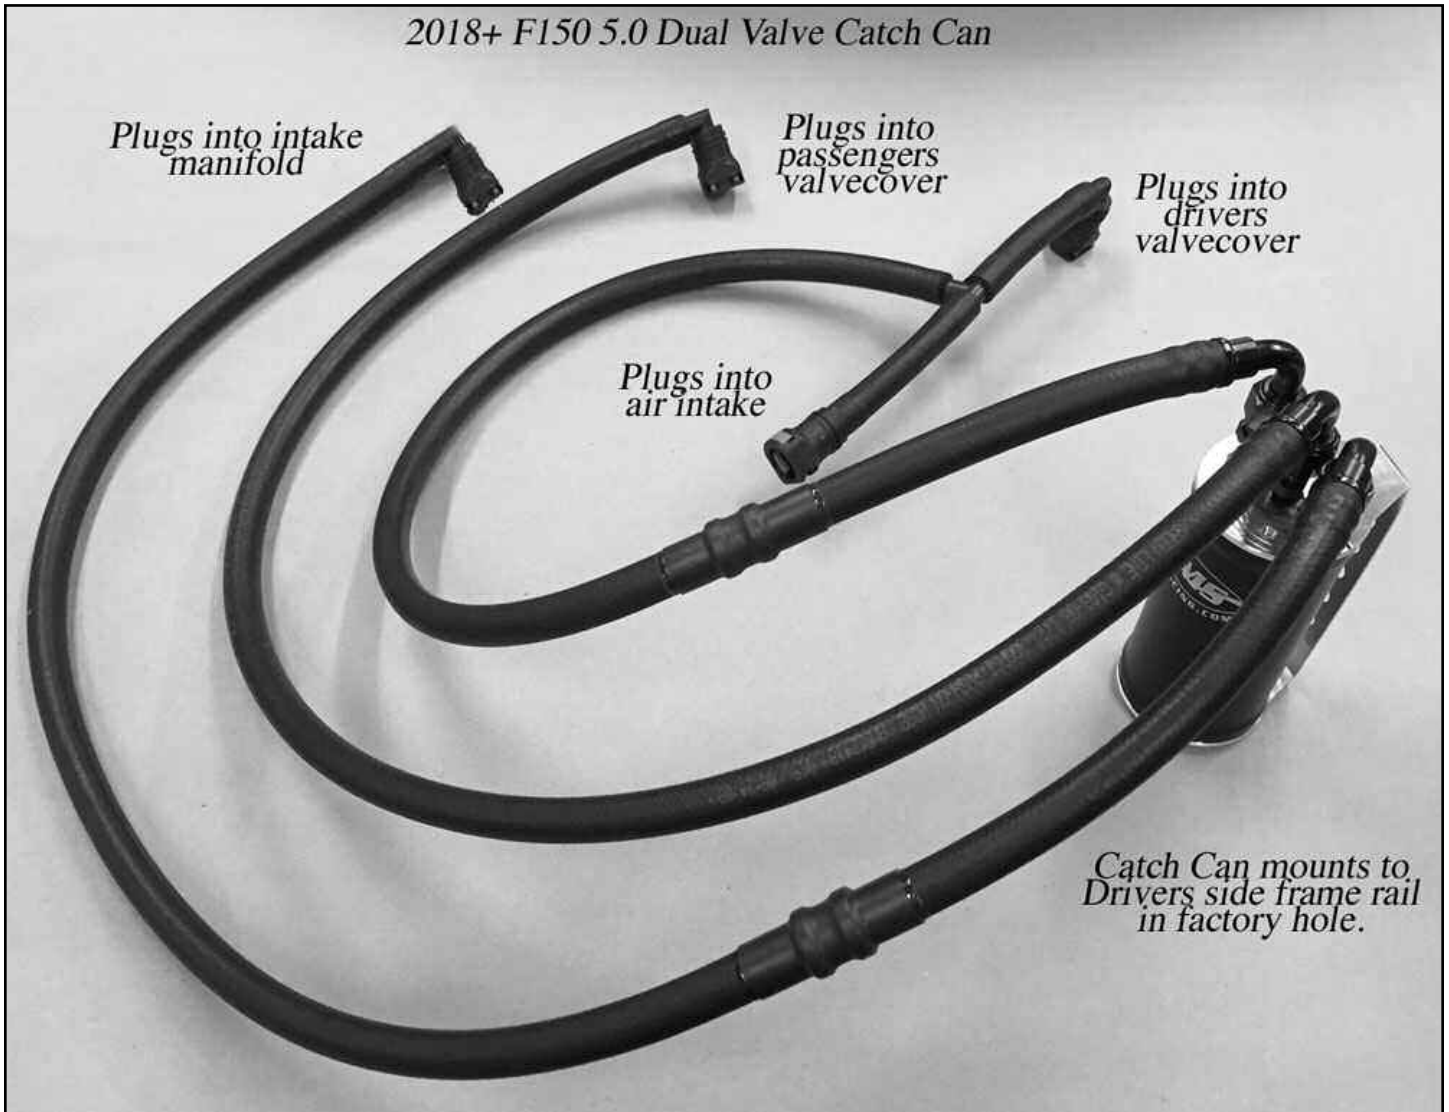


223114 Range Rd 285, Rocky View, Alberta, Canada T1X 0J7

Phone: (403) 243-6205 Fax: (403) 243-8102 www.wmsracing.com

2018 F150+ 5.0 Catch Can Install

- Assemble Catch Can to bracket in orientation as show using provided allen head screws and washers

Mount Catch Can to existing round hole in drivers side frame rail as shown. Use provided bolt and locknut. The bottom of the can will just clear the plastic shield in the correct location.

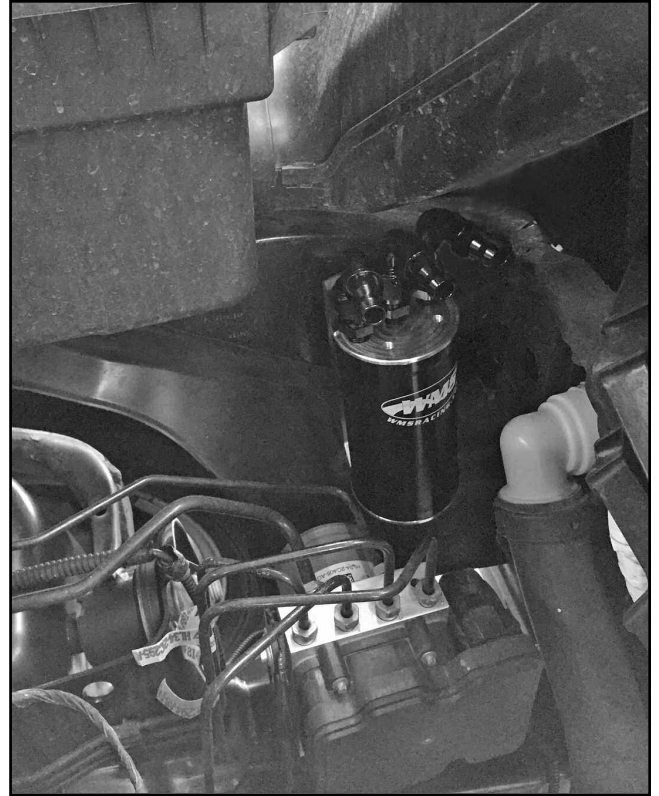

- Attach hoses to catch can as shown on tags. Route towards passengers side under the throttle body and to the valvecover.
- Remove stock valvecover to intake plastic line.
- Plug in new hoses to valvecover and intake manifold.

- Remove drivers side stock valvecover to intake plastic line.
- Plug in the hose with tee to valvecover and air intake as shown on tage.
- Attach hose from catch can to tee

- The drain hose can be routed out the bottom of the truck to make for easier draining of the main catch can.

Generally draining the catch cans every oil change is sufficient but each application is different. Do not let the cans fill with oil / vapor fluid as it could cause engine damage. Draining more often in cold climates is required so the fluid does not freeze in the can.

Discard any drained fluid.